

# FICHES PRODUITS LAVE-LINGE

MARQUE	-
CODE COMMERCIAL	-
CAPACITÉ EN KG (COTON)	-
CLASSE D'EFFICACITÉ ÉNERGÉTIQUE	-

**Consommation annuelle d'énergie - kWh par an, sur une base de 220 cycles de lavage standard pour les programmes coton à 60°C et à 40°C à pleine charge et à demi-charge, et de la consommation des modes à faible puissance. La consommation réelle dépendra de la façon dont l'appareil est utilisé.**

CONSOMMATION D'ÉNERGIE POUR UN PROGRAMME STANDARD COTON À 60°C À PLEINE CHARGE	- kWh
--	-------

CONSOMMATION D'ÉNERGIE POUR UN PROGRAMME STANDARD COTON À 60°C À DEMI-CHARGE	- kWh
--	-------

CONSOMMATION D'ÉNERGIE POUR UN PROGRAMME STANDARD COTON À 40°C À DEMI-CHARGE	- kWh
--	-------

CONSOMMATION ÉLECTRIQUE DU MODE « LAISSÉ SUR MARCHE »	- W
---	-----

CONSOMMATION ÉLECTRIQUE DU MODE « ARRÊT »	- W
---	-----

**Consommation annuelle d'eau - litres par an, sur une base de 220 cycles de lavage standard pour les programmes coton à 60°C et à 40°C à pleine charge et à demi-charge. La consommation réelle dépendra de la façon dont l'appareil est utilisé.**

**Classe d'efficacité d'essorage - , sur une échelle de G (le moins efficace) à A (le plus efficace).**

VITESSE D'ESSORAGE MAXIMALE	- RPM
-----------------------------	-------

**“-” et “-” sont les programmes de lavage standard auxquels se rapportent les informations contenues dans l'étiquette et la fiche produit. Ces programmes sont conçus pour nettoyer une charge de coton normalement sale. Ce sont les programmes les plus efficaces en termes de consommations d'énergie et d'eau combinées.**

DURÉE MOYENNE DU CYCLE - À DEMI-CHARGE	- min
--	-------

DURÉE MOYENNE DU CYCLE - À PLEINE CHARGE	- min
--	-------

DURÉE MOYENNE DU CYCLE - À DEMI-CHARGE	- min
--	-------

DURÉE DU MODE « LAISSÉ SUR MARCHE »	- min
-------------------------------------	-------

NIVEAU SONORE EN DB(A)	-
------------------------	---


NIVEAU SONORE EN DB(A) À L'ESSORAGE	-
-------------------------------------	---

TYPE D'INSTALLATION	-
---------------------	---

# GB

## PROGRAMME CHART

- A. Programme selector
- B. "Start Delay" button
- C. Programme sequence indicator (over the line)  
Start delay indicator (under the line)
- D. "Variable spin" button
- E. "Start/Pause" button
- F. "Reset" button
- G. "Door open" indication

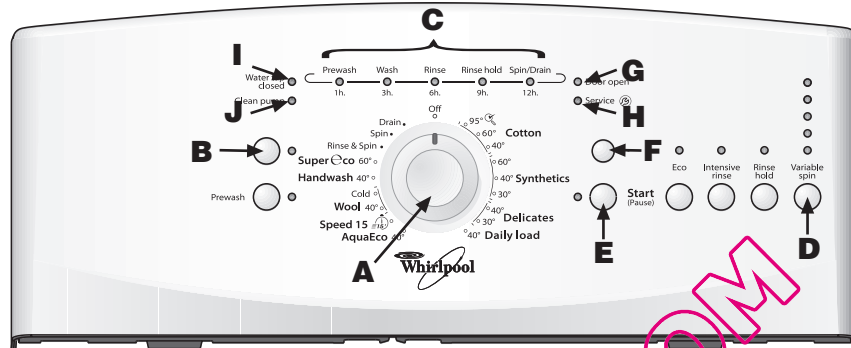

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

- H. "Service" indication
- I. "Water tap closed" indication
- J. "Clean pump" indication

- 1) Do not use liquid detergent for main wash if you have activated prewash option.
- 2) Do not use liquid detergent.
- 3) For improved garment care, spin speed is restricted to 400 rpm in this programme.

Programme	Care Labels	Max. Load kg	Type of wash / Notes <i>- respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options					Max. Spin Speed rpm
				Pre-wash	Main Wash	Softener	Start Delay	Pre-wash	Eco	Intensive rinse	Rinse hold	
<b>Cotton / Antibacterial</b> 40 - 60 - 95°C		6.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. <i>Selecting "Cotton 95", this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.</i>	*	Yes <sup>1)</sup>	*	* <sup>2)</sup>	*	*	*	*	Max.
<b>Synthetics</b> 30 - 40 - 60°C		3.0	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolefin, Trevira), polyamide (Perlon, Nylon).	*	Yes <sup>1)</sup>	*	* <sup>2)</sup>	*	*	*	*	Max.
<b>Delicates</b> 30 - 40°C		1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes <sup>1)</sup>	*	* <sup>2)</sup>	-	-	*	*	Max.
<b>Daily load</b> 40°C		3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	-	Yes	*	* <sup>2)</sup>	-	-	*	*	Max.
<b>AquaEco</b> 40°C		2.5	Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments. <i>Saving programme with very low water consumption. Use liquid detergent and the lowest recommended amount for 3 kg laundry. Do not use softener.</i>	-	Yes	-	* <sup>2)</sup>	-	-	*	*	Max.
<b>Speed 15</b> 30°C		3.0	Refreshed briefly worn outer clothing made of cotton, artificial fibers and blends with cotton. <i>Use lowest recommended detergent amount.</i>	-	Yes	*	* <sup>2)</sup>	-	-	*	*	Max.
<b>Wool</b> Cold - 40°C		1.0	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	-	Yes	*	* <sup>2)</sup>	-	-	*	*	Max.
<b>Handwash</b> 40°C		1.0	Textiles made of linen, silk, wool and viscose marked as "handwashable". <i>A very gentle spin is used in this programme.</i>	-	Yes	*	* <sup>2)</sup>	-	-	*	*	400 <sup>3)</sup>
<b>Supereco</b> 60°C		6.0	Heavily soiled and robust laundry made of cotton, synthetics and their blends. <i>Economical energy consumption by prolonged wash duration - ideal to be run overnight to profit from more favourable energy rates. Avoid noise of spinning at night by setting the spin speed to "0" and start spin programme in the morning, or by defining programme start with "Start delay" accordingly. - For garments with a high share of synthetic fibres, we recommend to use a laundry net.</i>	-	Yes	*	* <sup>2)</sup>	-	-	*	*	Max.
<b>Rinse &amp; Spin</b>	-	6.0	<i>Same as the last rinse and the final spin in the "Cotton" programme.</i>	-	-	*	*	-	-	*	*	Max.
<b>Spin</b>	-	6.0	<i>In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.</i>	-	-	-	*	-	-	-	*	Max.
<b>Drain</b>	-	-	<i>Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".</i>	-	-	-	*	-	-	-	-	-

Yes = dosing required / \* = optional

## CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes) ☺
Cotton / Antibacterial	95	6.0	55*	1.90	2:00
Cotton	60	6.0	48	1.14	2:30
Cotton + "Eco"***	60	6.0	48	0.90	3:30
Cotton + "Eco"***	60	3.0	35	0.78	2:30
Cotton	40	6.0	48	0.70	2:30
Cotton**	40	3.0	35	0.57	2:05
Synthetics	60	3.0	54*	0.90	1:40
Synthetics	40	3.0	48	0.55	1:25
Delicates	40	1.5	50	0.55	0:45
Daily load	40	3.0	40	0.45	1:00
AquaEco	40	2.5	19	0.45	1:00
Speed 15	30	3.0	30	0.15	0:15
Wool	40	1.0	55	0.55	0:45
Handwash	40	1.0	40	0.55	0:35
SuperEco	60	6.0	55	0.78	4:00

Hodnoty o spotrebe boli namerané za podmienok určených Normou IEC/EN 60 456. Spotreba sa môže v jednotlivých domácnostiach líšiť od údajov uvedených v tabuľke v závislosti od tlaku a teploty privádzanej vody, od náplne a od druhu prania. Spotreba vody a energie sa týka štandardného nastavenia spôsobu práce programov; výber špeciálnych volieb alebo zmena rotačnej rýchlosti alebo teploty zmení túto spotrebu.

☺ Trvanie programu môže byť odhorevedených hodnôt rozdielne, pretože závisí od skutočne aplikovaných pracovných podmienok (vid "Sprievodcu vyhľadávania porúch" vo Vašom Návode na používanie).

\* Aby sa znížila teplota vody, pred odčerpaním sa na konci cyklu hlavného prania privádza určité množstvo studenej vody.

\*\* Referenčné programy pre Energetický štítok.

## PREPARATION OF THE WASH CYCLE

- Load the machine, close the drum doors and check that they are properly locked.
- Add detergent and additives into the dispenser to no more than the **"MAX"** level mark, as follows:
  - Programme with pre and main wash | |
  - Main wash programme without prewash | |
  - Fabric softeners and conditioners ☼
  - Stain remover agents | |
  - Anti-scale agents (if necessary) | |
- Close the lid.
- Turn the **programme selector** to the desired programme and temperature. The lamp next to the **"Start/Pause"** button flashes. The indication lamp of the predefined spin speed lights up.

## SELECT THE DESIRED OPTION(S)

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.

### "Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 20 min.

### "Eco" button

- With a modified temperature profile and a slightly prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

### "Intensive Rinse" button

- The amount of water is increased to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with skin allergies.

### "Rinse Hold" button

- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- This option is particularly recommended for the "Synthetics", "Delicates" and "Daily load" programmes.
- It is useful if you want to postpone spinning to a later time, or if you want to drain out only.
- If you select "Rinse Hold", do not leave items to soak for too long.
- As soon as the appliance stops in the rinse hold, the "Anticrease" lamp of the sequence indicator lights up and the lamp next to the **"Start/Pause"** button flashes.

### Terminate the "Rinse Hold" option:

- Press the **"Start/Pause"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn the programme selector knob to the "Drain" programme and press the **"Start/Pause"** button.

### "Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

### START DELAY

The "Start delay" button allows the user to run the machine at his convenience, for example at night when electricity is cheaper.

- Select programme, spin speed and options.
- Press the "Start Delay" button several times to select a delay time of 1, 3, 6, 9 or 12 hours. The corresponding indicator lamp lights up.
- Start the programme (see "Programme Start"). The indication next to the "Start delay" button lights up and goes off when the programme starts.
- Once having pressed the **"Start/Pause"** button, the countdown of the time delay begins. When the programme starts, the start delay indicator light goes off and is replaced by the programme sequence indication.
- After the **"Start/Pause"** button has been pressed, the number of hours preselected can be reduced by pressing again the "Start delay" button.

### To cancel the "Start delay"

before you press the **"Start/Pause"** button:

- Turn the programme selector to another position or press the **"Reset"** button.

after having pressed the **"Start/Pause"** button:

- Press the **"Reset"** button for at least 3 second. The start delay indicator light goes off.

### PROGRAMME START

Open the tap and press the **"Start/Pause"** button. The indication lamp next to the **"Start/Pause"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phase is finished, the corresponding indication goes out.

- Note:** If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

### "DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

## FAILURE INDICATIONS

In case of any failures or irregularities, consult the "Troubleshooting Guide" in your Instructions for Use.

### "Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your "Instructions for Use"; if the fault persists, contact our After Sales Service.

### "Water tap closed"

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

### "Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use ("Removing the Filter").

## PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.
- Turn the programme selector to the "Off/O" position.
  - Close the water tap.
  - Open lid and drum and unload the machine.
  - Leave the lid open for some time to allow the interior of the machine to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

- Press the **"Start/Pause"** button to pause the programme. The light flashes.
- Select the new programme, any options and another spin speed if you want.
- Press the **"Start/Pause"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset"** button cancels a programme before the end. Press the **"Reset"** button for at least 3 seconds. Any existing water is drained out before the door can be opened.