

FICHES PRODUITS LAVE-LINGE

MARQUE	WHIRLPOOL
CODE COMMERCIAL	AWOE 8548 NB
CAPACITÉ EN KG (COTON)	8
CLASSE D'EFFICACITÉ ÉNERGÉTIQUE	A+

Consommation annuelle d'énergie 223 kWh par an, sur une base de 220 cycles de lavage standard pour les programmes coton à 60°C et à 40°C à pleine charge et à demi-charge, et de la consommation des modes à faible puissance. La consommation réelle dépendra de la façon dont l'appareil est utilisé.

CONSOMMATION D'ÉNERGIE POUR UN PROGRAMME STANDARD COTON À 60°C À PLEINE CHARGE	1.2 kWh
--	---------

CONSOMMATION D'ÉNERGIE POUR UN PROGRAMME STANDARD COTON À 60°C À DEMI-CHARGE	0.6 kWh
--	---------

CONSOMMATION D'ÉNERGIE POUR UN PROGRAMME STANDARD COTON À 40°C À DEMI-CHARGE	0.6 kWh
--	---------

CONSOMMATION ÉLECTRIQUE DU MODE « LAISSÉ SUR MARCHÉ »	2.32 W
---	--------

CONSOMMATION ÉLECTRIQUE DU MODE « ARRÊT »	0.11 W
---	--------

Consommation annuelle d'eau 11440 litres par an, sur une base de 220 cycles de lavage standard pour les programmes coton à 60°C et à 40°C à pleine charge et à demi-charge. La consommation réelle dépendra de la façon dont l'appareil est utilisé.

Classe d'efficacité d'essorage B, sur une échelle de G (le moins efficace) à A (le plus efficace).

VITESSE D'ESSORAGE MAXIMALE	1200 RPM
-----------------------------	----------

“Eco Cotton 60°C” et “Eco Cotton 40°C” sont les programmes de lavage standard auxquels se rapportent les informations contenues dans l'étiquette et la fiche produit. Ces programmes sont conçus pour nettoyer une charge de coton normalement sale. Ce sont les programmes les plus efficaces en termes de consommations d'énergie et d'eau combinées.

DURÉE MOYENNE DU CYCLE Eco Cotton 40°C À DEMI-CHARGE	180 min
--	---------

DURÉE MOYENNE DU CYCLE Eco Cotton 60°C À PLEINE CHARGE	240 min
--	---------

DURÉE MOYENNE DU CYCLE Eco Cotton 60°C À DEMI-CHARGE	180 min
--	---------

DURÉE DU MODE « LAISSÉ SUR MARCHÉ »	- min
-------------------------------------	-------

NIVEAU SONORE EN DB(A)	59
------------------------	----

NIVEAU SONORE EN DB(A) À L'ESSORAGE	78
-------------------------------------	----

TYPE D'INSTALLATION	Pose-libre
---------------------	------------



GB

PROGRAMME CHART


A. "Door open" indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

B. "Service" indication

C. "Water tap closed" indication

D. "Clean pump" indication

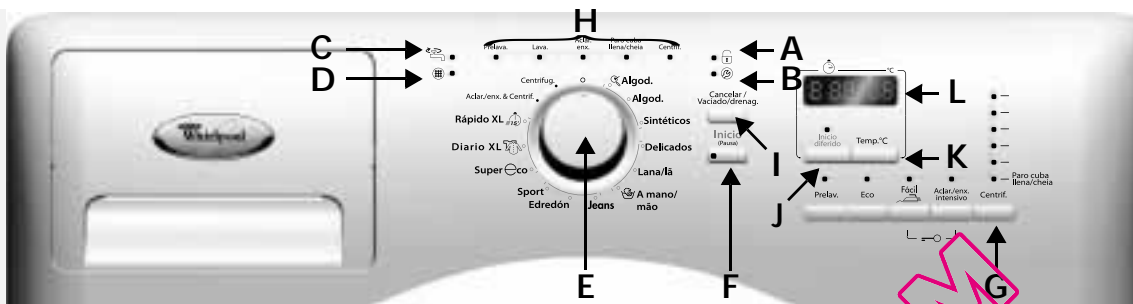

E. Programme selector

F. "Start (Pause)" button

G. "Variable spin" button

H. Programme sequence indicator

I. "Reset/Drain" button

J. "Start delay" button

K. "Temperature" button

L. Display

Programme	Temperature	Care Labels	Max. Load kg	Type of wash/Notes	Detergents and additives			Special options					Max Spin Speed rpm	
					Pre-wash	Main Wash	Softener	Start delay Inicio diferido	Pre-wash Prelav.	Eco Eco	Easy ironing Facil	Intensive Aclar./enx. Intensivo		Variable spin Centrif.
White Cotton / Antibacterial	70 - 95 °C		8.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	*	Yes	*	*	*	*	*	*	*	max.
Cotton	20 - 60 °C		8.0	At a temperature of 80°C or more, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	*	Yes	*	*	*	*	*	*	*	max.
Synthetics	20 - 60 °C		3.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	*	Yes	*	*	*	*	*	*	*	max.
Delicates	20 - 40 °C		2.5	Curtaains and delicate clothing, dresses, skirts, shirts and blouses.	*	Yes	*	*	*	—	—	—	*	1000 ¹⁾
Wool	20 - 40 °C		2.0	Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by The Woolmark Company for machine washable wool.	—	Yes	*	*	—	—	—	—	*	1000 ¹⁾
Handwash	20 - 40 °C		2.0	Textiles made of silk, linen, wool and viscose marked as "handwashable". This programme (40°C) is tested and approved by The Woolmark Company for handwashable wool.	—	Yes	*	*	—	—	—	—	*	400 ¹⁾
Jeans	20 - 60 °C		7.0	Normally soiled cotton jeanswear and garments made of robust jeanslike material such as trousers and jackets.	*	Yes	*	*	*	*	—	—	*	max.
Big Items	20 - 60 °C		3.0	Blankets made of synthetic fibres; bed covers filled with feathers, polyester or other artificial fibres; sleeping bags, bathmats and similar items.	*	Yes	*	*	*	—	—	*	*	1000 ¹⁾
Sport	20 - 30 °C		3.5	Normally soiled and sweaty sportswear made of cotton jersey or microfibers. This programme includes a prewash cycle – you can add detergent also to the prewash chamber. Do not add any softener.	*	Yes	—	*	—	—	*	*	*	max.
SuperEco	20 - 60 °C		8.0	Normally to heavily soiled and robust bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to "0" and start spin programme in the morning, or define programme start with "Start Delay" accordingly.	—	Yes	*	*	—	—	—	*	*	max.
Daily load	20 - 60 °C		6.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	—	Yes	*	*	—	—	*	*	*	max.
Speed 15	20 - 30 °C		3.0	Refreshes briefly worn outer clothing made of cotton, artificial fibers and blends with cotton. Use lowest recommended detergent amount.	—	Yes	*	*	—	—	—	—	*	max.
Rinse & Spin	—	—	8.0	Same as the last rinse and the final spin in the "Cotton" programme.	—	—	*	*	—	—	—	—	*	max.
Spin	—	—	8.0	In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.	—	—	—	*	—	—	—	—	*	max.

*: optional / Yes : dosing required
¹⁾ For improved garment care, spin speed is restricted in this programme.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash" provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart. M0702

Whirlpool is a registered trademark of Whirlpool USA



CONSUMPTION DATA

Programme	temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)*
White Cotton / Antibacterial	95	8.0	82**	2.40	2:10
Cotton	60	8.0	59	1.36	2:20
Cotton with "Eco"***	60	8.0	59	1.04	4:00
Cotton	40	8.0	77	0.75	2:05
Synthetics	60	3.5	46**	0.85	1:35
Synthetics	40	3.5	42	0.50	1:20
Delicates	30	2.5	60	0.40	0:45
Wool	40	2.0	60	0.60	0:45
Handwash	40	2.0	45	0.60	0:40
Jeans	40	7.0	95	0.80	2:21
Big Items	40	3.0	74	0.75	1:30
Sport	30	3.5	54	0.55	1:34
SuperEco	60	8.0	75	0.95	4:00
Daily load	40	6.0	73	0.60	1:00
Speed 15	30	3.0	30	0.20	0:15

Consumption values were measured in normalized conditions in compliance with Standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

* The time indicated on the display can deviate from the values in the table, because it takes into account the operation conditions applicable at that time.

** To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

*** Reference Programme for Energy Label.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Load your laundry, close the door properly and add detergent as indicated on the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the **programme selector** to the desired programme. The display shows the programme duration in hours and minutes as well as the predefined temperature. The **"Start (Pause)"** button blinks.
2. The **temperature** can be altered by pressing the "Temperature" button.
3. The indication lamp of the predefined **spin speed** lights up; in case you want to set another spin speed, press the "Variable spin" button.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up.

When the combination of programme and option is not possible, the lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Prewash" button

- Only for heavily soiled loads (for example sand, granular dirt) sensible. Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Eco" button

- With a modified temperature profile and a prolonged washing duration, the optimum combination of excellent washing result and even lower energy consumption is achieved.

"Easy ironing" button

- Helps to make ironing easier.
- Increases the water quantity and the clothes are spun very gently.

"Intensive rinse" button

- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Variable spin" button

- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If you select spin speed "0" the final spinning is cancelled but intermediate spin peaks remain during rinse. The water is drained out only.

- If you select **"Rinse hold"**, the laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.

- Select **"Rinse hold"** if you want to postpone spinning to a later time or if you want to drain only.

- Do not leave the laundry to soak in the rinse hold for too long.

- The programme stops to "Rinse hold" when the "Rinse hold" light in the programme sequence indicator is on; the "Rinse hold" light of the "Variable spin" button and the **"Start (Pause)"** button light blink.

- To terminate the "Rinse hold" by draining the water, without any spinning, press the **"Start (Pause)"** button.

- To terminate the programme by spinning the laundry, press the "Variable spin" button to select the desired spin speed and then the **"Start (Pause)"** button to start the spin cycle.

START DELAY

The "Start delay" allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start delay".

- Select programme, temperature and options.
- Press the "Start delay" button to select a delay time up to 23 hours; the light of the **"Start (Pause)"** button blinks.
- Press the **"Start (Pause)"** button; the countdown of the delay time begins. The light of the **"Start (Pause)"** button is on; the light of the start delay button will keep blinking until the programme starts.
- As soon as the programme starts, the start delay on the display is replaced by the remaining programme time, and the light of the "Start delay" button goes off.
- Once having pressed the **"Start (Pause)"** button, the number of hours preselected can be changed by pressing and holding the "Start delay" button.

To cancel the "Start delay"

..before you press "Start (Pause)":

- Turn the programme selector to another position or press the **"Reset/Drain"** button.

..after having pressed "Start (Pause)":

- Press **"Start (Pause)"** - the delay time disappears from the display; press **"Start (Pause)"** again to start the selected programme immediately.

PROGRAMME START

Open the tap and press **"Start (Pause)"**; the light stops blinking and is on. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.

The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the display.**

CHILD LOCK —○

Activating the child lock prevents children from starting a wash cycle or changing the settings of a running programme. The child lock cannot be activated or deactivated when the programme selector is in the "Off/O" position. To activate the child lock:

- Turn the programme selector to a programme position, or run a programme as usual.
- Press the 2 buttons marked with the key symbol —○ simultaneously for at least 3 seconds; a key-like symbol will shortly appear on the display to indicate that the child lock is active.

Any time you try to change a programme setting with active child lock, the display will shortly show the key-like symbol. The programme setting cannot be changed anymore; the only change possible is to switch the washer off by turning the programme selector to the "Off/O" position. To deactivate the child lock:

- Press again the 2 buttons marked with the key symbol —○ simultaneously for at least 3 seconds.

"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show that the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Reset a running programme before the end".

RED INDICATIONS

"Service"

Lighting up of the "Service" indication can be caused by a fault in an electrical component. Refer to the "Troubleshooting Guide" in your Instructions for Use; if the fault persists, contact our After Sales Service.


"Water tap closed"

The appliance has no or insufficient water supply; a signal sounds. Open the water tap; if the indication still lights up, refer to the "Troubleshooting Guide" in the Instructions for Use.

"Clean pump"

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned; in the latter case refer to the Instructions for Use ("Removing the Filter").

PROGRAMME END

- The display shows "End" and the "Door open" indication  lights.
1. Turn the programme selector to the "Off/O" position.
 2. Close the water tap.
 3. Open the door and unload the machine.
 4. Leave the door ajar to allow the drum to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press **"Start (Pause)"** to pause the programme; the light blinks.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press **"Start (Pause)"** again. The light is on, and the programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

RESET A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.

- Press the **"Reset/Drain"** button for at least 3 seconds; "rES" appears on the display. Any existing water is drained before the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA

5019 301 06334