

WA13V5
WA10V5

Washing Machine

user manual

QUELLAVELINGE.COM

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register



features

- **Air Turbo Drying System**

- Air Turbo technology spins hard and fast so you can spend less time drying.
- Time Saving AIR TURBO saves your time, ensuring your clothes are dried 30%-40% faster than line drying alone. Especially during the rainy season and in high-humid weather, laundry that once took days to drip-dry, such as heavy jeans, bulky sweaters, and thick blankets are dried more rapidly.
- Easy-to-iron AIR TURBO is perfect for delicates and clothes made of synthetic fabrics. No more hanging and waiting. Simply iron straight-out-of-the washer, since AIR TURBO eliminates just enough moisture to keep clothes adequately damp for ironing.

- **Diamond Drum**

- The diamond shaped drum creates a high water pressure, removing dirt from the laundry effectively. The diamond drum minimizes fabric damage extending the lifetime of the fabric. The glittering inner tube is both beautiful and powerful in the wash effect it creates.

- **Fuzzy Control**

- Fuzzy control operates with best washing program by sensing the washload like artificial intelligence.

- **Tempered Transparent Door**

- Lets you observe while the washer is operating. Check on your laundry's progress at any time

- **Double Storm Pulsator- Less Tangle, Better Washing Performance**

- Tangle Free - Multi-dimensional water currents help clothes stay tangle free.
- Water current technology designed specifically to enhance washing performance. The power of tornado-like multi-dimensional water currents guarantee excellent washing performance.

- **Magic Filter**

- This unique magic Filter ensures that all the lint inside the tub is captured for top quality filtering results to deliver consistently effective cleaning results.

- **Auto Restart**

- The power is turned on automatically after power failure.

- **CHILD-LOCK Function**

This is a device to protect children from being accidentally hurt while playing with the washer.

- How to start the Child-Lock function:

Press the "Power" button to go to an initial washing mode.

By pressing "Start/Pause" button, you start washing and in case Child Lock function is needed during the laundry

Press both the "Water level" and "Function" buttons at the same times.(for 3 seconds)

(Note: You cannot perform the function without the "Power" button on.)

To release the function of Child-Lock: In case the "Child-Lock" is programmed, press both the "Water level" and "Function" buttons at the same time.

safety instructions

Please note that the following precautions for safety intend to prevent unpredictable danger and damage by helping the proper use in safety. When using hot water in washing, please make sure that the water should not exceed 50°C.

- Plastic parts may be deformed or damaged, and an electric shock or a fire may take place.

WARNING


There might be serious injury or fatal accident when you violate this instruction.

- If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not pull the cord off or touch it with moist hands.
 - An electric shock or a fire may take place.
- Do not bend the power supply cord by force or press it with heavy things.
 - An electric shock or a fire may take place.
- Do not install the washer nearby electric implement or don't put a candle light or cigarette light on the washer.
 - A fire may take place.
- During operation, do not put your hands or metal materials under the washer.
 - You may be hurt by spinning board beneath the washer.
- Stay away from the washer when the bottom of the washer sinks into the water.
 - There might be an electric shock. Please wait until the water drains out completely.
- Do not put laundry stained with gasoline, benzene, or alcohol in the washer, and keep the materials away from the washer.
 - An explosion or a fire may take place.
- During spinning, don't put your hand in the spinning tub.
 - It may hurt your hands. If it does not stop within 15 seconds after you open the lid, call service agent immediately.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- This appliance has to be connected to the plug endurable to proper power consumption.
- This appliance has to be positioned so that the plug is accessible after installation.
- No user-serviceable parts inside. Refer any servicing to qualified service personnel.
 - Otherwise this may cause a mechanical error, electric shock, fire or physical damage.
 - The product warranty does not cover problems resulting from disassembling the product.
- Do not use this product for business purposes.
- For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.

safety instructions

CAUTIONS

There might be a slight injury or damage when you violate this instruction.

- Don't install it in the area with moisture or outdoor where it has rain or snow.
 - An electric shock or a fire may take place.
- Please unplug the power supply cord when you do not use it.
 - An electric shock or a fire may take place.
- If there is dust or water on the power supply plug and its connected part, please remove it completely.
 - An electric shock or a fire may take place.
- Do not make your kids look into the inside of the washer.
 - If your kid falls into the washer, his life could be in danger.
- Ventilate immediately without touching the power plug if gas is leaking.
 - An electric shock or a fire may take place if it catches flame.
- If the washer makes strange noise, smell or smoke, unplug it promptly and call service agent.
 - An electric shock or a fire may take place.
- When cleaning, don't spray water to the parts of the washer directly.
 - It may make its life span shorten. Also an electric shock or fire may take place.
- Don't use several appliances together with an outlet.
 - A fire may take place due to unusual heat.
- Don't press the button with an awl or pin.
 - An electric shock or a fire may take place.
- Use the new hose-sets and old hose sets should not be reused.
- If the damage is found on the current cord in use, it should be replaced by manufacturer, service center or authorized person in order to avoid the risk.
- Connect the grounding wire to the shell plate, and bury it under at least 25cm of earth; alternatively, connect the ground wire to the appropriate pin on a properly grounded power receptacle. Never connect the wire to a telephone line, lightning rod, or gas pipe. 

contents

| | | |
|-------------------------------|---|---------------------|
| SETTING UP YOUR WASHER | 6 | Description of part |
| | 7 | Control Panel |

6

| | | |
|-------------------------|----|------------------|
| MANUAL FUNCTIONS | 10 | Manual functions |
|-------------------------|----|------------------|

10

| | | |
|---------------------------------------|----|-------------------------------------|
| INSTALLATION & MAINTENANCE | 11 | Environment |
| | 11 | Leveling |
| | 11 | Connecting the water supply hose |
| | 12 | How to connect the drain hose |
| | 12 | How to clean the pump filter |
| | 13 | Assembling the rat protection panel |
| | 13 | How to put the detergent in |
| | 13 | How to add the fabric softener |
| | 13 | Water supply connector filter |
| | 13 | Cleaning the filter |

11

| | | |
|------------------------|----|-----------------|
| TROUBLESHOOTING | 14 | Troubleshooting |
|------------------------|----|-----------------|

14

| | | |
|------------------------------------|----|-----------------------------|
| WASHING MACHINE WON'T WORK? | 14 | Washing machine won't work? |
|------------------------------------|----|-----------------------------|

14

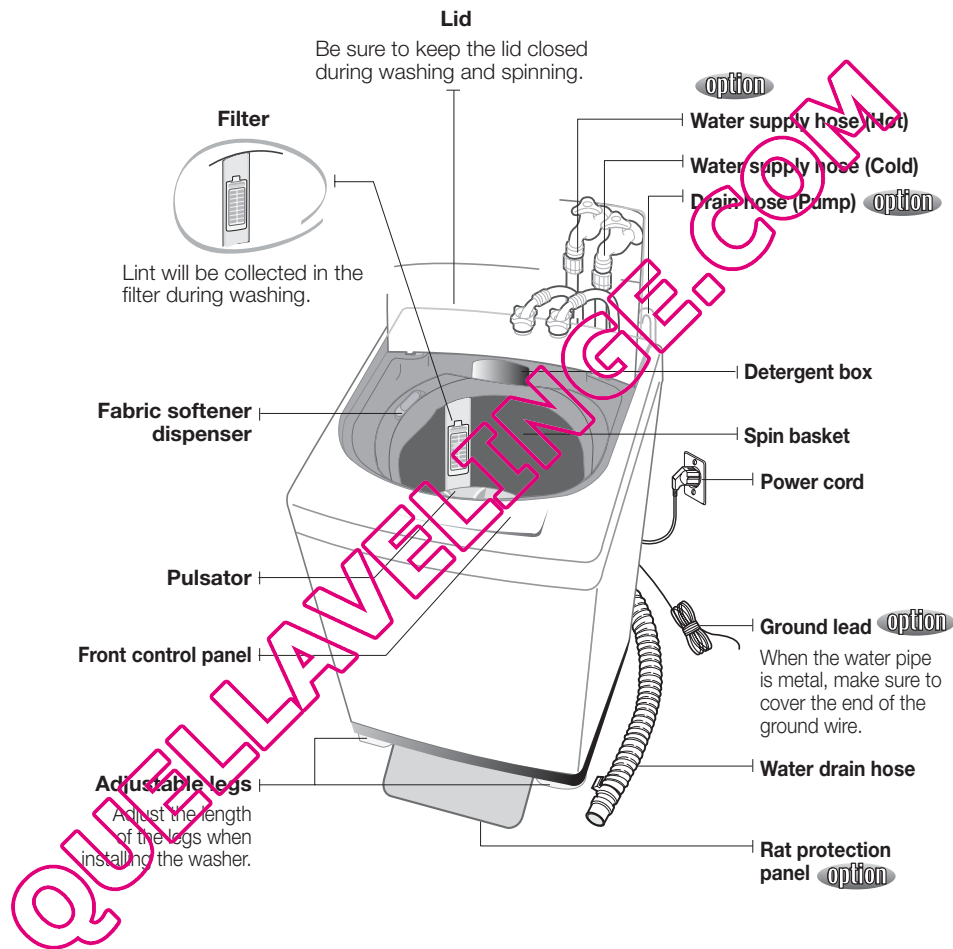
| | | |
|----------------------|----|---------------|
| SPECIFICATION | 15 | Specification |
|----------------------|----|---------------|

15

setting up your washer


DESCRIPTION OF PART

The User's Manual is for common use.
Make use of the User's Manual depending upon your washing machine model.



CONTROL PANEL

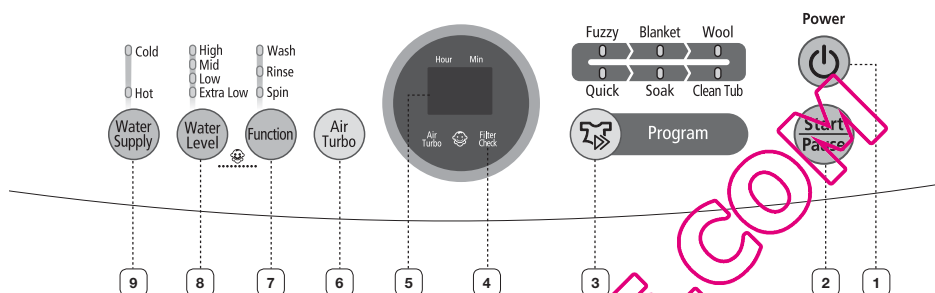For more details, see control panel of your washing machine.



| | |
|--|--|
| 1 POWER BUTTON | Press this button once to operate. Press it again to turn the power off. |
| 2 START/PAUSE BUTTON | Use to pause and restart the operation. To change the washing procedure during an operation, press this button to stop, and again to restart after changing the procedure. |
| 3 PROGRAM SELECT BUTTON | Each time the button is pressed, the washing program changes; Fuzzy → Blanket → Wool → Quick → Soak → Clean Tub |
| 4 FILTER CHECK | When the wash is finished, the warning lamp lights up on the filter check . When the door is opened, it turns off. (This is not a fault.) When the Magic filter is clogged, foreign materials may start sticking to the laundry. To ensure a clean wash, please remove foreign materials from the filter after every wash. |
| 5 REMAINING TIME, DELAY START TIME, ERROR DISPLAY | Displays the remaining wash time. Displays the reserved delay start time. Displays the error state if a problem occurs in the washing machine so that you can take action. |
| 6 AIR TURBO BUTTON | Press this button to speed dry your laundry. This function can only be selected if a spin cycle is set. You can add this function to all programs except for the Wool program. |
| 7 FUNCTION BUTTON | With every press of this button, the function changes; Wash, Rinse, Spin → Wash → Rinse → Spin → Wash & Rinse → Rinse & Spin → Wash, Rinse, Spin |
| 8 WATER LEVEL BUTTON | The water level is automatically adjusted. However, you can select the water level manually by pressing this button. Mid → High → Mid → Low → Extra low → Low → Mid |
| 9 WATER SUPPLY BUTTON <small>option</small> | Each time this button is pressed, the type of water is selected as follows, Cold → Cold + Hot → Hot → Cold |

 
Setting up your washer_7

setting up your washer

FUZZY PROGRAM

Selects the best washing program automatically.

1. Press the **Power** Button to "On".
2. Press the **Start/Pause** button.
Water level is selected automatically. Washing rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
3. Close the lid.



BLANKET PROGRAM

(Big volume laundry like blanket and bed cover sheets)

1. Press the **Power** button to "On".
2. Press the **Program** select button once.
3. Press the **Start/Pause** button.
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
4. Close the lid.
 - Fold those big volume laundry (blanket and bed cover sheets) in the following way before adding into the spin basket.
 - Do not wash the electric blanket and carpets.
 - Get a laundry net for those light and big volume laundry (eg. Cashmeres) because they might rise in the water and get damaged.



WOOL PROGRAM

Washable sweater, cardigan, delicate clothes etc.

1. Press the **Power** button to "On".
2. Press the **Program** select button two times
3. Press the **Start/Pause** button.
Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.
4. Close the lid.



- You can only select cold water.
- The last spin operates lightly to prevent wrinkles.
- Use the detergent indicated in the laundry.
- Air turbo cannot be selected in the Wool program.



QUICK PROGRAM

If you want to wash those frequently used towels or less dirty laundry time. Because washing is speedy, it is good for light or less stained laundry.

1. Press the **Power** button to “On”.
2. Press the **Program** select button three times.
3. Press the **Start/Pause** button.



4. Close the lid.
Water level is selected automatically. Washing, rinsing, and spinning follow. If you want to pause, press the **Start/Pause** button again. You can change the program when paused.

SOAK PROGRAM

Select this function when you wish to wash your laundry by soaking it.

1. Press the **Power** button to “On”.
2. Press the **Program** select button four times
3. Press the **START/PAUSE** button and put the proper amount of detergent into tub.
4. Close the lid.



KEEPING THE TUB CLEAN

When using the machine under humid conditions for an extended time, various bacteria from the air may stick to the tub and form black dirt (fungi), causing damage to the human body. To keep the tub clean and hygienic at all times, it is recommended reading “CLEAN TUB PROGRAM” above and using only dedicated or recommended detergents to clean the tub regularly at least once every one to three months.

CLEAN TUB PROGRAM

Use this program to clean the tub. It will keep the tub clean and sanitary.

1. Press the **Power** button to “On”.
2. Press the **Program** select button five times.
3. Press the **Start/Pause** button.
4. Add a dedicated detergent and close the lid



- Never place laundry in the tub when cleaning inside the tub, as this can cause discoloration or damage to the laundry.
- When doing the laundry after cleaning the tub, you may find some impurities. These are just detergent residues and impurities after the tub cleaning. Perform the rinse cycle two to three times.

 
The Soak function (20 minutes) is set automatically.

The water level is set to Mid early on and then changed to High during the rinse.

manual functions

Possible to select the function for each program.

Ex) If you want to wash in the quick program : Power - Select quick program - press function button once
- Start/Pause button



WASH ONLY

Press the **Power** button.

Press the **Function Select** button once.

Press the **Start/Pause** button once.

Washing goes on for 15 minutes.

When the **Function** button is pressed during washing, the wash time can be changed to between 4 and 30 minutes in duration.



RINSE ONLY

Press the **Function** button twice.

Press the **Start/Pause** button once.

Rinsing goes on for 2 times.

When the **Function** button is pressed during rinsing, the rinse times can be changed to between 2 to 5 times in duration.



SPIN ONLY

Press the **Function** button three times.

Press the **Start/Pause** button once.

Spin drying goes on for 5 minutes.

When the **Function** button is pressed during spinning, the spin time can be changed to from 4 to 9 minutes.



WASH AND RINSE

Press the **Function** button four times.

Press the **Start/Pause** button once.

Detects the amount of laundry, and determines wash and rinse time period automatically.

When the **Function** button is pressed during working, the rinse times can be changed to between 2 to 5 times in duration.



RINSE AND SPIN

Press the **Function** button five times.

Press the **Start/Pause** button once.

Rinsing and spin drying follow.

When the **Function** button is pressed during working, the rinse times can be changed to between 2 and 5 times in duration.

installation & maintenance

The User's Manual is for common use. Make use of the User's Manual depending upon your washing machine model.

ENVIRONMENT

Leave some space - Maintain at least 10cm between the washer and the wall.

Place the washer on a sturdy flat surface. - If the washer is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 1°) Adjust the legs for even placement.

Never install the washer near water. - Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.

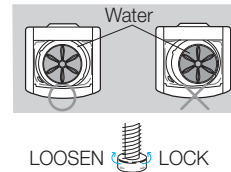
Avoid direct sunlight or heaters. - As plastic and electrical components are affected by direct heat, never place the washer near furnaces, boilers, etc. Do not place under direct sunlight.

LEVELLING

 
 
 
 
 

 
If the washer is not leveled with the ground, it makes the machine tremble more or be out of order. So, make sure that the washer is leveled properly.

SEE IF THE MACHINE IS PLACED LEVEL BY CHECKING THE POSITION OF THE WASHING TUB.

- Open the lid of the machine, pour water into the tub up to the level just below the pulsator, and adjust the legs so that the pulsator is positioned at the center of the water as shown in the figure.
- Place the machine more than 10cm away from the wall.
- Adjust the legs on feet for levelling.



CONNECTING THE WATER SUPPLY HOSE

1. Remove the adaptor from the water supply hose.
 2. First, using a "+" type screw driver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (b) following the arrow for gap about 5 mm between them.
 3. Connect adaptor to the water tap by tightening the screws firmly. Then, turn part (b) following the arrow and put (a) and (b) together.
 4. Connect the water supply hose to the adaptor. Pull down the part (c) of the water supply hose. When the part (c) is released, the hose is automatically connected to the adaptor making a 'click' sound.
 5. Connect the other end of the water supply hose to the inlet water valve at the back of the washer. Screw the hose clockwise all the way in.
 - 5-1. Connect the other end of the water supply hose to the inlet water valve at the top of the washer. Screw the hose clockwise all the way in.
- If the water tap is a screw type, assemble a water supply hose that fits to the tap as shown. After completing connection, if water leaks from the hose, then repeat the same steps.



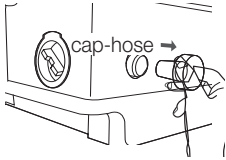
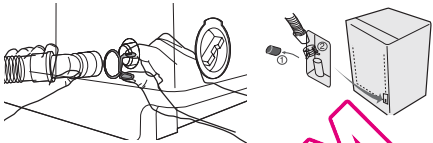
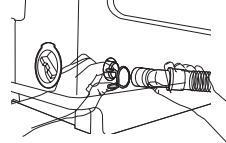
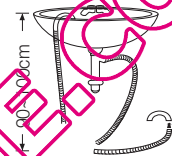
After completing connection, if water leaks from the hose, then repeat the same steps.

Use the most conventional type of faucet for water supply. In case the faucet is square or too big, remove the spacing ring before inserting the faucet into the adaptor.





installation & maintenance

HOW TO CONNECT THE DRAIN HOSE option

IN CASE OF PUMP-DRAINED WASHER


| | |
|---|--|
|  <p>Take out the cap-hose and connect the outlet-hose.</p> |  <p>Be sure to join tightly the drain hose into the drain outlet on the back of the machine.</p> |
|  <p>Be sure to join tightly the drain hose into the drain-outlet on the side of the machine.</p> |  <p>Install the drain hose in the position of about 90~100cm above the ground.</p> |

 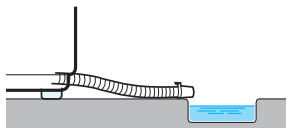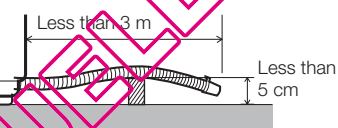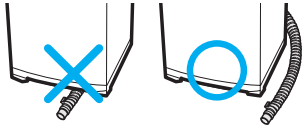CAUTIONS WHEN INSERTING THE DRAIN HOSE (IN CASE OF GENERAL WASHER)


| | |
|---|--|
|  <p>1. Don't exceed more than 3m when the drain hose is used by connecting with other hoses.</p> |  <p>2. Be careful to drain water out at the end of the drain hose.</p> |
|  <p>3. The door sill shouldn't be more than 5cm.</p> |  <p>4. Don't install the drain hose underneath the wash machine.</p> |

HOW TO CLEAN THE PUMP FILTER option

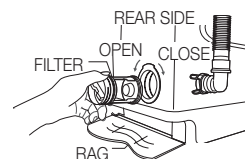
1. Place a rag under the washer filter not to wet the floor.
2. Rotate the filter counterclockwise and pull out the filter.
3. Remove dirt and rotate the filter clockwise until it locks in position.



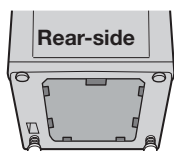ASSEMBLING THE RAT PROTECTION PANEL option



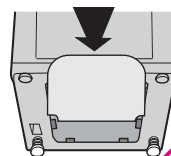1. It is easier engaging the shutter when the set is lifted up a little, as shown in the figure below.



2. Insert the shutter completely through the engagement hole from the back.

HOW TO PUT THE DETERGENT IN

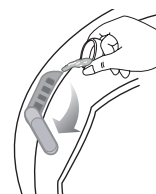
- Open the detergent box by pulling in the direction of the arrow as shown in the figure and then put the powder detergent in the detergent box.
- Put in one-time amount of detergent evenly so the detergent may not brim over the box.




HOW TO ADD THE FABRIC SOFTENER

Slide and open the cover in the direction of the arrow, insert the rinse detergent, and slide and close it in the reverse direction.

- When a proper amount (one time dose) of fabric softener is stored in the softener inlet, it is automatically put in at the last rinsing cycle.
- Do not use detergent, bleach or starch into the Softener Inlet.
- Using too much softener may produce unsatisfactory results.
- Do not open the lid during the Spin Dry cycle. If added too early, its effectiveness will decrease.
- Do not leave the softener into the Softener Dispenser for a long time. Because softner became stiff.



WATER SUPPLY CONNECTOR FILTER

 

1. Pull out the filter and wash well.



2. Pull in the filter and connect the hose to the inlet water valve tightly.



3. Check if there is a leakage. Note to tighten up the connector.

 
CLEANING THE FILTER

1. Push the upper part of the Magic filter and pull in.



3. Clean the Magic filter.

2. Open the cover as shown in the figure.



4. Close the cover and insert the lower part of the filter in the basket first and then push the filter with "click" sound.



troubleshooting

| PROBLEM | CHECK |
|---------------------------------|---|
| Washing machine won't work | <ul style="list-style-type: none"> - Is the water tap opened? - Is the washer plugged in? - Is the power cut off? - Is there enough water? |
| Water dose not drain 5E | <ul style="list-style-type: none"> - Is the drain hose down?(No pump) - Is the drain hose frozen? - Is the drain hose clogged? - If the water dose not drain in 15 minutes, a buzzer will sound, and the remaining time indicator will show "5E". |
| Water is not supplied 4E | <ul style="list-style-type: none"> - Is the water tap opened? - Is the water cut off? - Is the water supply hose or hose connection clogged? - Is the water tap frozen? - If the water supply is not finished in 1 hour or there is no change in the water level 4 minutes after the water supply has started, the buzzer rings and "4E" is displayed on the remaining time indicator. |
| Spinning does not work UE UE | <ul style="list-style-type: none"> - Is the laundry spread out evenly in the washer? - In the washer set on a sturdy flat surface? |
| Water is overflowed 1E 0E | <ul style="list-style-type: none"> - Restart after spinning. - If the error sign still indicates, call agency. |

washing machine won't work?

| Problem | CHECK & SOLUTION |
|--|--|
| The power is cut off. | <ul style="list-style-type: none"> Is the electric voltage normal? Is the washer plugged in? Plug in the electric cord. ➔ Water does not drain. Is the drain hose down? Put the drain hose down. Is the drain hose folded? Unfold the drain hose. Is the drain hose outlet clogged? Remove the waste cleanly. |
| Washing machine won't work. | <ul style="list-style-type: none"> Is the washer lid open? ➔ Close the lid. Is the Pause button on? ➔ Press the Start/Pause button one more time and check if the washer starts. Is enough water filled to the water level? ➔ If the water pressure is low, it takes a long time to start washing. Is the faucet closed? ➔ Open the faucet to supply water. |
| If the drain hose and spin basket are frozen, do as follows. | <ul style="list-style-type: none"> • Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. • Pour hot water into the spin basket for about 10 minutes. • Put a hot water towel on the drain hose connector. • If the drain hose defrosts, connect again and check for proper water draining. |
| The water drains out immediately. | <ul style="list-style-type: none"> • The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. Half fill the spin basket with water and try for spinning again. |
| The water leaks at the water supply hose connector. | <ul style="list-style-type: none"> If the faucet connecting part is loose, water may leak. ➔ Repeat the assembling steps again. (Refer to "Connecting the water supply hose") Check if the rubber packing of water supply hose is in the right position. ➔ Screw tightly again. Is the water supply hose folded? ➔ Unfold the hose. |

| Problem | CHECK & SOLUTION |
|---|--|
| The water leaks at the water supply hose connector. | <p>If the water supply is too strong, water may leak. ➔ Close the faucet a little.</p> <p>Is water leaking from the faucet itself? ➔ Fix the faucet. Water is not supplied.</p> <p>Did you press the Start/Pause button after selecting the water supply?</p> <p>➔ If the Start/Pause button is not pressed, water is not supplied. Press the Start/Pause button.</p> <p>Is the faucet closed? ➔ Turn on the faucet.</p> <p>Is the filter net at the water supply hose connector clogged with dirty matters?</p> <p>➔ Clean the filter net by brushing with a toothbrush.</p> <p>Is the water supply cut off? ➔ If the water supply is suspended, turn off the faucet and power off.</p> |
| Spinning makes loud noises and vibrations. | <p>Check if the laundry is spread evenly in the washer. ➔ Spread out the laundry evenly and start again.</p> <p>Check if the washing machine levels on a sturdy flat floor. ➔ Set the machine at level.</p> <p>Is the handle for leveling legs loose? ➔ Adjust the legs on the feet for levelling.</p> <p>Is around the washing machine filled with unnecessary stuffs?</p> <p>➔ Remove those unnecessary things away from the wash machine.</p> |

specification

WA10V5

| | | | | | |
|-------------------|------|--|----------------------|-----------|---------|
| POWER CONSUMPTION | WASH | 470 W | STANDARD WATER LEVEL | HIGH | 77 l |
| | SPIN | 280 W | | MID | 64 l |
| DIMENSIONS(mm) | | W601XD654XH968 (mm) | | LOW | 55 l |
| WEIGHT | | 45 kg | | EXTRA LOW | 43 l |
| WATER PRESSURE | | 0.05~0.78 MPa (0.5 ~ 8.0 kg f/cm ²) | WATER USAGE | | 212 l |
| WASHING TYPE | | Stirring Type | SPIN SPEED | | 720 rpm |

WA13V5

| | | | | | |
|-------------------|------|--|----------------------|-----------|---------|
| POWER CONSUMPTION | WASH | 470 W | STANDARD WATER LEVEL | HIGH | 83 l |
| | SPIN | 290 W | | MID | 76 l |
| DIMENSIONS(mm) | | W601XD654XH993 (mm) | | LOW | 55 l |
| WEIGHT | | 45 kg | | EXTRA LOW | 43 l |
| WATER PRESSURE | | 0.05~0.78 MPa (0.5 ~ 8.0 kg f/cm ²) | WATER USAGE | | 227 l |
| WASHING TYPE | | Stirring Type | SPIN SPEED | | 720 rpm |



QUESTIONS OR COMMENTS?

| Country | CALL | OR VISIT US ONLINE AT |
|--------------|------------------------|--|
| SOUTH AFRICA | 0860-SAMSUNG(726-7864) | www.samsung.com/za |

Code No. DC68-02596G_EN